



Philips
Flash audio player

512MB*

KEY016

SuperSkip

MP3

wearable MP3

Up to 16 hours of music

Wear and flaunt the sleek 512MB Key016 and enjoy 8 hours of MP3 or 16 hours of WMA music on the go. Transfer music, data or recharge via Direct USB. Its innovative neck-strap remote control ensures total playback access - and freedom!

Ready to wear, Ready to go

- Intuitive neck-strap remote control for easy music access
- Small and wearable - weighing only 31 grams
- Ultra lightweight, strong and durable magnesium body
- External battery pack for hours more enjoyment

Easy, intuitive music experience

- SuperSkip™ navigation finds songs in a simple, fast way
- Direct USB for easy file transfers without cables!
- Direct battery recharge via USB
- Backlit LCD display

Your music, your data - on the go, everyday

- 512MB* built-in memory
- Enjoy MP3 and WMA playback
- USB mass storage to store and carry your data files

PHILIPS
sense and simplicity

Specifications

Sound

- **Frequency response:** 30 - 15000 Hz
- **Signal to noise ratio:** 80
- **THD:** 1.0
- **Output Power:** 2 x 4 mW (16 Ohm)

Audio Playback

- **Compression format:** MP3, Windows Media™ Audio
- **ID3 Tag support:** Track title and artist name
- **MP3 bit rates:** 8-320 kbps and VBR
- **MP3 sample rates:** 8, 11.025, 16, 22.050, 32, 44.1, 48 kHz
- **WMA bit rates:** 5 - 192
- **WMA sample rates:** 8, 11.025, 16, 22.050, 32, 44.1, 48

Picture/Display

- **Backlight color:** Blue
- **Lines of text:** 2

Storage Media

- **Built-in memory capacity:** 512
- **Built-in memory type:** NAND Flash
- **Music memory capacity, MP3:** up to 135 tracks (128 Kbps)
- Mass storage class compliant

Connectivity

- **Headphone:** 3.5 mm
- **USB:** USB 1.1

Accessories

- **Neck strap remote control:** AY4203
- **Headphones:** HE570/77P
- **External Battery Pack:** AY4381
- Printed User Guide

- Quick start guide
- **CD-ROM:** AY4489

Software

- **Music Match Jukebox:** Music Match Jukebox

System Requirements

- CD-ROM drive
- **Hard disk space:** 50 MB
- **Mac OS:** OS9.2.2 & 10.2.6 or higher
- **PC OS:** Windows 98 SE, 2000, ME, XP
- **Processor:** Pentium MMX 166 MHz or higher
- **RAM memory:** 96 MB RAM
- Sound card

Dimensions

- **Master carton quantity:** 3
- **Master carton dimensions:** 160 x 160 x 171 mm
- **Packaging type:** D-box
- **Packaging dimensions (W x H x D):** 150 x 150 x 50 mm
- **Product dimensions (W x H x D):** 27 x 88 x 16 mm
- **Product weight:** 0.031 kg
- **casing material:** Magnesium

Power

- **Battery capacity:** 200 mAh
- **Battery Type:** Li-Polymer
- **Charging time:** approximately 4 hours hr
- External battery pack
- **External battery type:** 1 x AAA
- **Playtime on external battery:** 7 hours
- **Playtime on internal battery:** 6 hours

Green Specifications

- Lead-free soldered product

Product highlights

Neck-strap remote control

This highly intuitive neck-strap remote control lets you wear your player around your neck and easily take control of your music. It has embedded buttons right on the neck-strap providing access to the most common playback controls: Volume Up, Volume Down, Previous Track, Neck Track, and Play/Pause.

Small and wearable - 31 grams

Magnesium body

External battery pack

The External battery pack is a sleek battery pack that snaps snugly onto your player and delivers additional power for music enjoyment on the go. The External battery pack uses standard alkaline batteries from where the player draws power. The result is even longer hours of pure enjoyment.

SuperSkip™

SuperSkip™ navigation find songs in a simple fast way. SuperSkip™ through your playlist on your device at full speed simply by pressing and holding the Track Previous or Track Forward button and find your favorite song in a matter of seconds.

Direct USB

Devices with direct USB can be plugged directly into the USB port of your PC without the need for any cable. Your computer will automatically recognize the device as a removable USB mass storage device (Windows 98 requires additional drivers) allowing you to easily drag and drop files via Windows Explorer (or Apple Folders) between your computer and device. Simply pack your device with music and data on the go - everyday.

USB direct battery recharge

Direct battery recharge via USB offers ultra convenience when recharging your device. No need to bother with separate chargers or cables, simply plug n' recharge your device directly on your PC.

Backlit LCD display

512MB* built-in memory

Enjoy MP3 and WMA playback

USB mass storage device

USB mass storage devices offer a convenient way to save, backup and move your files around. The devices connect to your computer using a USB connection and do not require any special software to be installed (only Windows 98 and Me need drivers). The device automatically shows up as a removable drive in Windows Explorer allowing you to simply drag and drop files to and from the device.



Date of issue 2007-01-18

Version: 6.0

12 NC: 9073 101 01168
EAN: 87 10895 83505 3

© 2007 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

www.philips.com

- * 1MB = 1 million bytes; available storage capacity will be less.
- * Rechargeable batteries have a limited number of charge cycles and may eventually need to be replaced. Battery life and number of charge cycles vary by use and settings.
- * Storage capacity based on 4 minutes per song and 64 kbps WMA or 128 kbps MP3 encoding.
- * Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- * Actual transfer speed may vary based on your operating system and software configuration.